

1 Static protection

1. Do not open static bag until in a static safe environment.
2. Use a static safe workstation, with grounding provisions.
3. Ground the computer system in which the card is to be installed.
4. Insure power is removed from the computer system.
5. Ground yourself with a static protection wrist strap.
6. Open the static bag and remove the board.
7. Secure the PCI card in an appropriate PCI slot.
8. Insure PCI card is fully seated.
9. Fasten screw through PCI front bezel slot to chassis.
10. Reassemble computer and restart.



1.1 PCI slots allowed

On legacy 5v PCI slots insure the area behind the slot (to the left in this picture) does not obstruct the rear tab of the card.



Legacy 5v PCI slots

PCI-X or PCI-64 slots allow all 4 tabs of the card to be inserted in the slot.



PCI-X or PCI-64 slots

1.2 Software Installation

Detailed software installation instructions are contained in the ASCB User Manual. Software and manuals are available for download at <http://www.thegoebelcompany.com/Support.html>.

1.2.1 Honeywell TIU

Honeywell TIU software is maintained on Honeywell's internal web site. Contact your Honeywell representative or Support@GoebelEtc.com for assistance in locating or installing TIU software.

1.2.2 Windows

Upon completion of boot, a window appears indicating new hardware is found. Follow the installation instructions in the [AscbWindowsInstall.pdf](#).

1.2.3 Linux

Upon completion of boot install the RDC and ASCB RPMs according to the installation instructions in the [ASCBUsermanual.pdf](#).